



Valve



1" Valve and 3/4" PVC header:
Max flow: 420 gph (7 gpm)

Max 190 gph

Max 190 gph

3/4" pvc header



For new plants use 1/4" micro tubing and Netafim Micro Tubing Adaptor to put water directly on each new plant's root ball (remove after 1 year).

Each sub-grid is a closed loop

Flush valve

Flush valve



Plug all emitters that aren't needed in the beginning with Netafim drip-per plug rings. Remove them as the plants grow.